 



WARNING

These instructions are to be used to supplement Z-Vent Installation instructions.

Before assembling each Z-Vent Insulated joint, install supplied insulation around male end of inner vent pipe then assemble joint in accordance with Z-Vent Installation instructions.

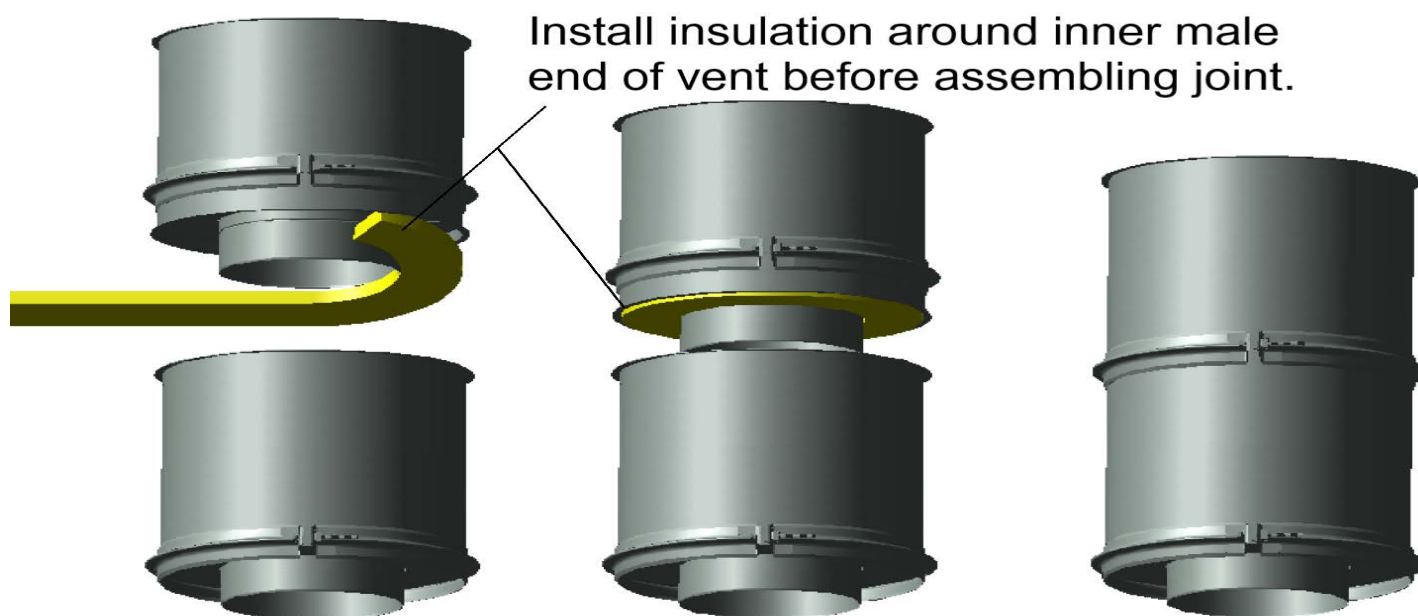

 Z-Vent Double Wall ZV-Clamp 2SVD_VI2

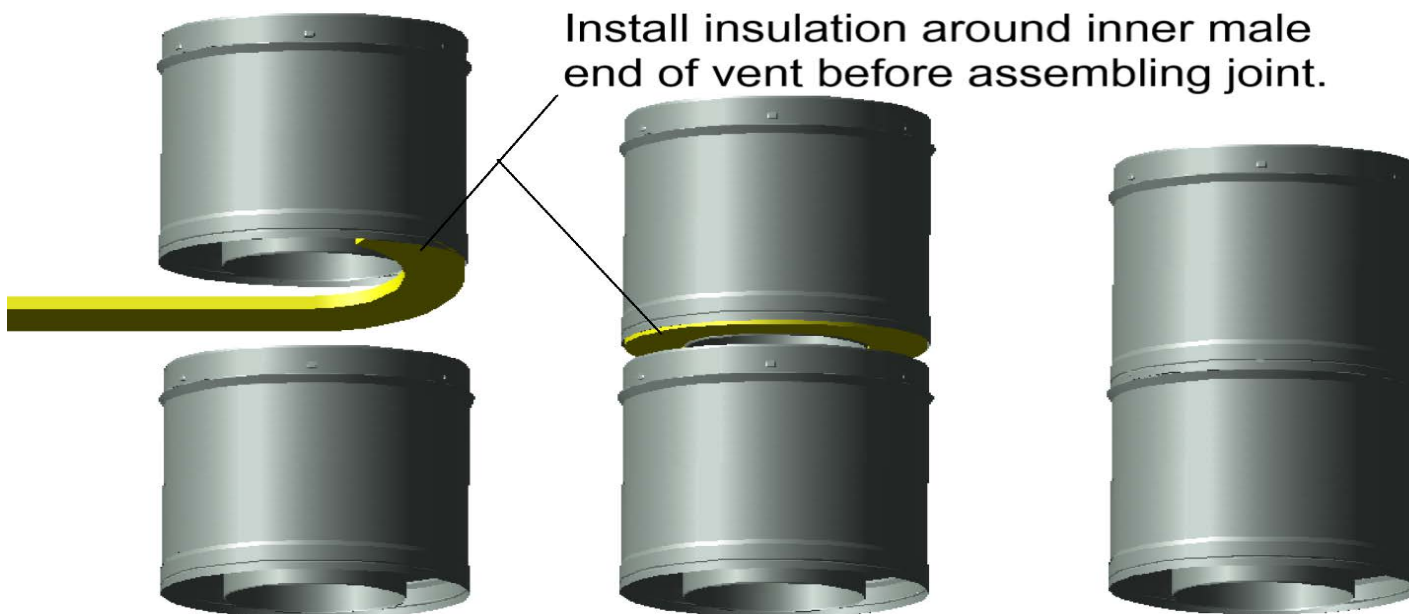


Z-Vent Double Wall Snap Lock 2SVD_I2

Canada: 452 Attwell Drive, Etobicoke, ON M9W 5C3 tel: 416.679.0045, fax: 416.679.0051


USA: 20 Commerce Park North, Bedford, New Hampshire tel: 603.669.5136, 800.654.5600, fax 603.669.0309

ADJUSTABLE PIPE

 Insulation will be shipped loose along with Z-Vent double wall adjustable sections. Once adjustable length is determined, cut insulation accordingly and insert between inner and outer walls with 1/2" of insulation below end of outer pipe."

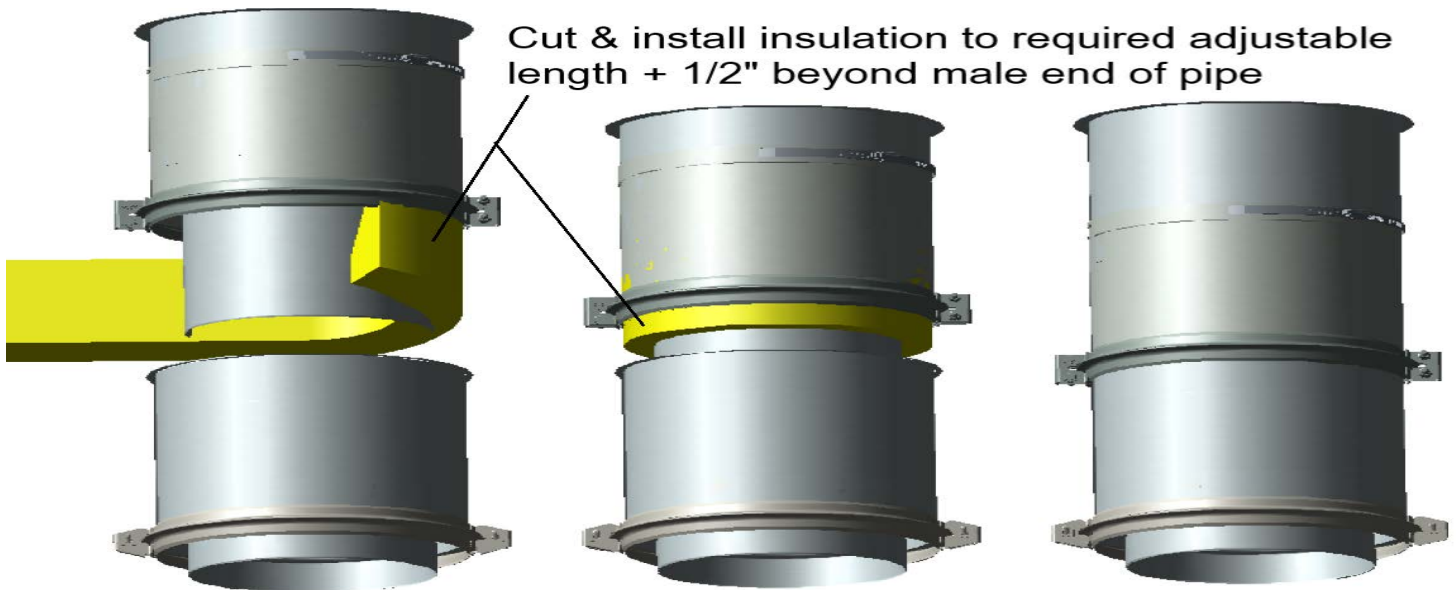

Z-Vent Double Wall ZV-Clamp 2SVDPA_VI2

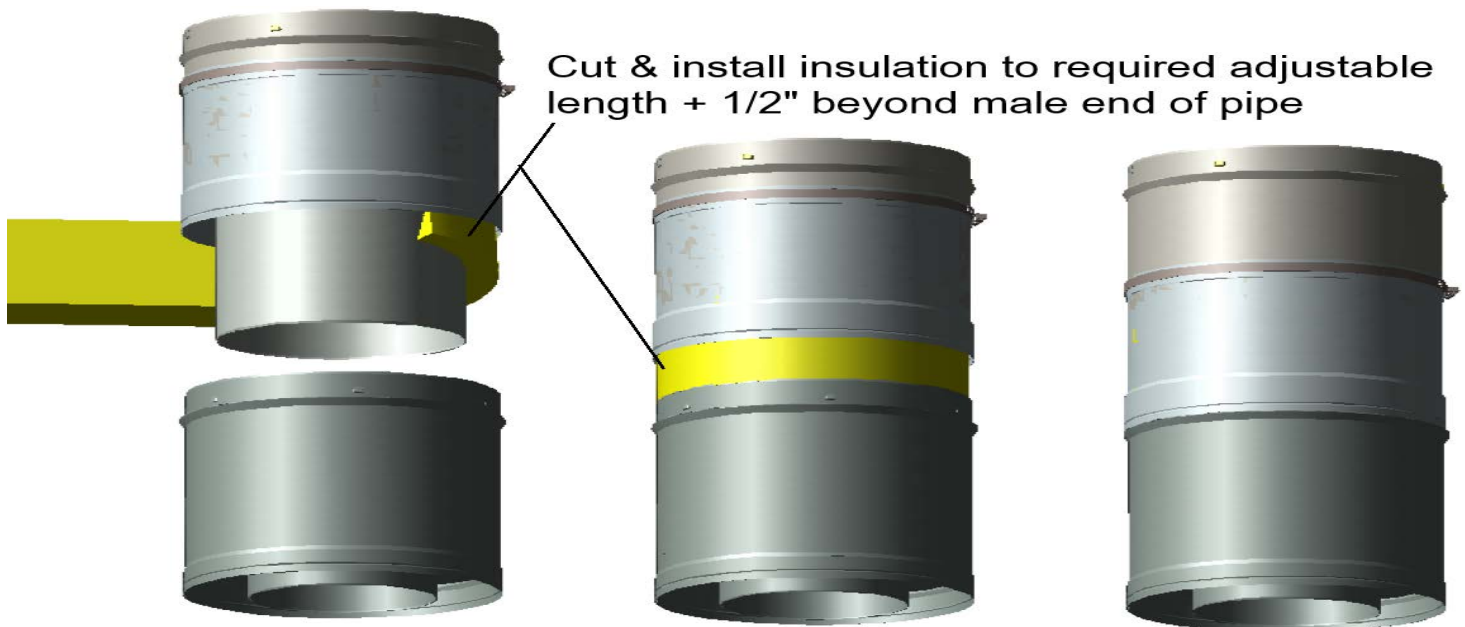 

Z-Vent Double Wall Snap Lock 2SVDPA_I2

The information provided within is for informational purposes only. We have made every effort to ensure the accuracy of the provided information and assume no responsibility for any loss or damage due to errors or omissions or to the use or misuse of any information supplied. It is impossible to test all products under all conditions to which they might be subjected in the field. It is therefore the buyer and/or end users' responsibility to test all products under the conditions that duplicate the service conditions prior to installation. All improvements, all specifications are subject to change without prior notice. It is the buyer and/or end users' responsibility to review our complete Terms and Conditions of Sale located on our web sites at: www.novaflex.com | www.z-flex.com | www.flexmaster.com

Information subject to change without notice.

Contact Z-Flex for any additional information.