

# Joint Lubrication

May be used as an aid when assembling Z-Vent Single Wall / Double Wall components together.

If required, the lubricant may be applied in one of 2 ways.


(Single wall pipe shown for illustration purposes)

- 1) Apply a very thin film of lubricant to the leading edge of the gasket that is seated in the large end of the Z-Vent pipe / fitting.



**OR**

- 2) Apply a very thin film of lubricant to the outside leading edge of the small end of the Z-Vent pipe / fitting that is to be inserted into the gasket end of the adjoining pipe/fitting.

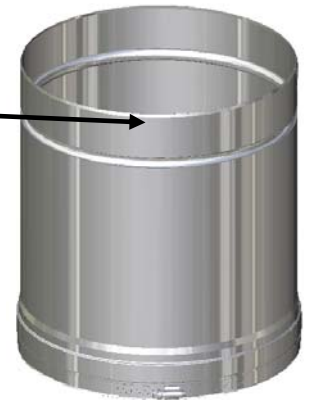

Insert the pipe evenly and slowly until properly seated.  
Refer to the Z-Vent Installation Guide located on our website.

[www.z-flex/downloads](http://www.z-flex/downloads)

Vent Ø	Approximate # of joints per 5.3oz Tube *	Vent Ø	Approximate # of joints per 5.3oz Tube *
3	32	12	8
4	24	14	7
5	19	16	6
6	16	18	5
7	14	20	5
8	12	22	4
9	11	24	4
10	10		

**\*Note:** The number of joints per 5.3oz tube is an approximation only



Part ID 2LUBE

\* Information subject to change without notice.

Z-VENT™ is manufactured by Z-Flex® US, a Novaflex Group Company