
## 18" Aerocowl

## Installation Instructions

Depending on Individual applications, not all hardware may be used.

The UNIVERSAL DASE hardware pakage should include:











4-J BARS

4-SPRING CLIPS


4-FLAT BARS

4-NUTS

4-BOUTS

Make sure chimney flue is properly cleaned before installing your Actocowl.

Choose the correct clamping device configuration, based on the size of your flue, and attach

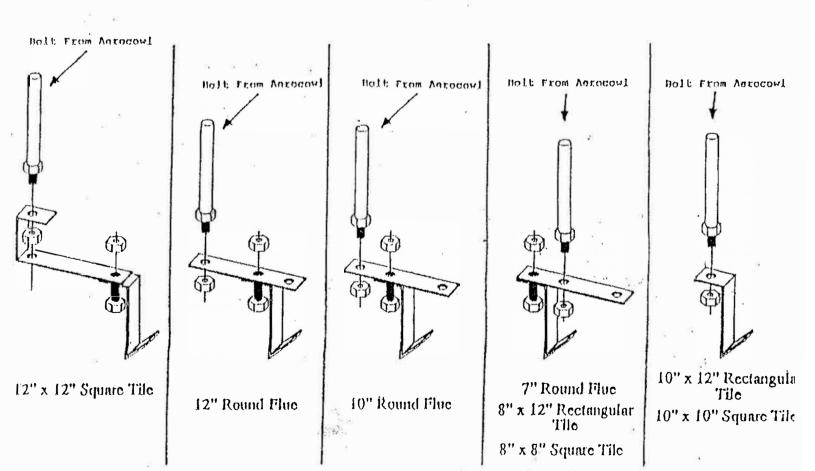


The information provided within is for informational purposes only. We have made every effort to ensure the accuracy of the provided information and assume no responsibility for any loss or damage due to errors or omissions or to the use or misuse of any information supplied. It is impossible to test all products under all conditions to which they might be subjected in the field. It is therefore the buyer and/or end users' responsibility to test all products under the conditions that duplicate the service conditions prior to installation. All improvements, all specifications are subject to change without prior notice. It is the buyer and/or end users' responsibility to review our complete Terms and Conditions of Sale located on our web sites at: www.novaflex.com | www.z-flex.com | www.flexmaster.com.

## Bracket Mounting Location

nothin fight configuration

SOURING & TICC FAHORIAN THE CONFIGURATION

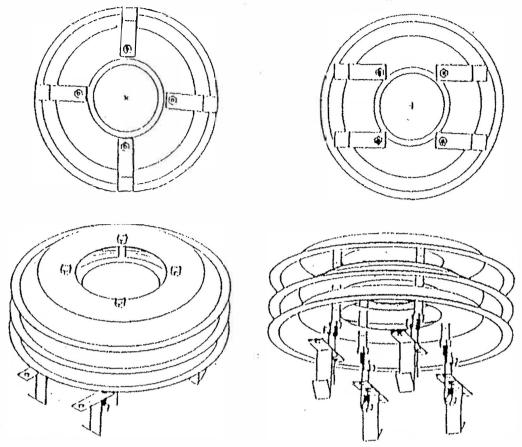

IMPORTANT NOTE: DUE TO SLIGHT VARIATION IN FLUE SIZES IT MAY BE NECESSARY TO BEND THE SPRING CLIPS TO ENSURE PROPER FIT.

After brackets are located correctly, lighten all nuls securely.

Position the AEROCOWL over the center of the flue opening. Apply even pressure to the top of the AEROCOWL with both hands (with gloves) and push downward until the support arms of the clamping devive are resting on the edge of the flue tile.

(see diagram below)

